Haier
INNOVATIVE DESIGN

Clothes Dryer

OWNER'S USER MANUAL

Model: HDY60M

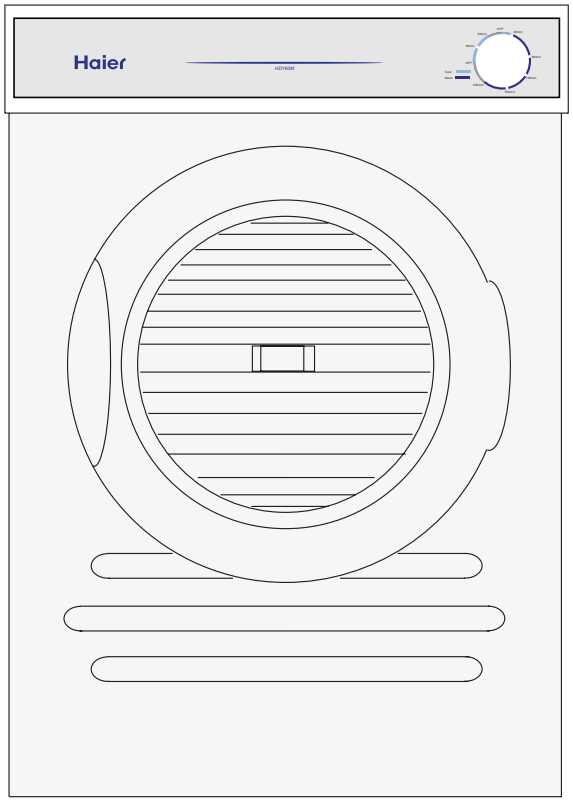

Please read this manual carefully before operating your dryer.
Retain this for future reference.
Record the model and serial number of the tumble dryer.
Please have this information ready for any service related enquiries.

IMPORTANT SAFETY INSTRUCTIONS

Warning - To reduce the risk of fire, electric shock, or personal injuries, the following basic precautions should be followed:

1 *This appliance should only be used for its intended purpose as described in this owner's user manual.*
2 *This appliance must be properly installed in accordance with the installation instructions before it is used.*
3 *Never unplug your appliance by pulling on the power cord. Always make sure the outlet is switched off then grasp the plug firmly and pull straight out from the outlet.*
4 *Replace worn power cords, loose plugs and faulty power outlets immediately.*
5 *Unplug your appliance before cleaning or before proceeding with any repairs. Repairs should only be carried out by an authorised technician.*
6 *Do not operate your appliance when parts are missing, damaged or broken.*
7 *Do not operate your appliance in the presence of explosive fumes or toxic flammable vapours.*
8 *Do not use this appliance to wash clothes which are stained, spotted or washed in gasoline, dry cleaning solvents or any other explosive or flammable substances that may ignite and explode.*
9 *Do not try to remove clothes while the dryer is in motion. Wait until it comes to a complete stop.*
10 *The lid must be closed when the machine is in operation.*
11 *Do not use this appliance for commercial applications.*
12 *Do not operate this appliance unless all panels are properly intact.*
13 *The appliance is not to be used by children without adult supervision.*
14 *This appliance must be connected to an approved electrical outlet with 240V power source.*
15 *Do not repair or replace any part of the appliance. This can only be carried out by an authorised technician.*
16 *To reduce the risk of electric shock or fire, try not use extension cords or adapters to connect the unit to electrical power source.*
17 *Items that have been previously cleaned, washed, soaked or spotted with flammable or explosive substances should not be placed in the tumble dryer.*
18 *Items containing foam rubber (latex foam) or similar texture should not be placed in the tumble dryer.*
19 *Fabric softeners or similar products should not be used in the tumble dryer unless specified by the manufacturer.*
20 *Undergarments that contain metal reinforcements should not be placed in the tumble dryer. Damages caused by this, will not be covered under warranty.*
21 *Plastic and rubber article such as shower caps, baby waterproof napkin covers, shoes, clothes with foam rubber pads or pillows should not be placed in the tumble dryer.*
22 *Do not install this appliance where it is exposed to water or where it is damp.*

appliancesonline.com.au
Australia's largest online appliance retailer

23 Clean lint filter before and after each load.

TABLE OF CONTENTS

PAGE

OPERATING INSTRUCTIONS
IDENTIFICATION OF PARTS 3
OPERATING INSTRUCTIONS . . . . . 4 - 5
CONTROL PANEL 6

CLEANING AND CARE GUIDE
CLEANING AND MAINTAINANCE 7

INSTALLATION
UNPACKING YOUR DRYER 8
WALL MOUNTING INSTRUCTIONS . . . . . 9 - 11

TROUBLE SHOOTING AND SPECIFICATIONS
TROUBLE SHOOTING 12
WIRING CIRCUIT 12
SPECIFICATIONS 13

IDENTIFICATION OF PARTS

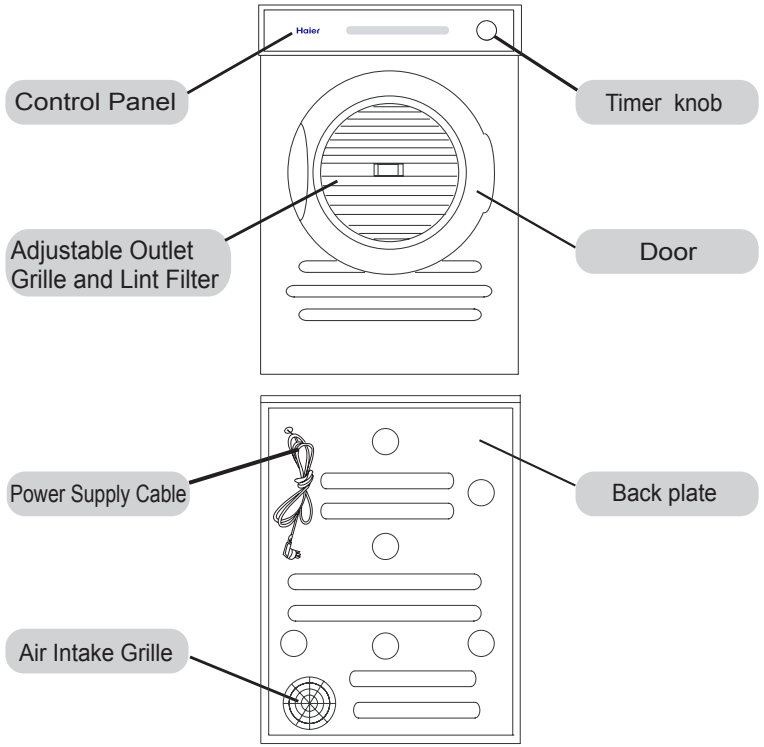

This diagram may slightly differ from the layout of the dryer you have just purchased as this is due to technical improvements and should only be used for reference.

appliancesonline.com.au
Australia's largest online appliance retailer

OPERATING INSTRUCTIONS

Attention:

1. Before operation, clean off any dust and dirt inside the drum of the dryer with a damp towel;
2. Clean off any debris on the lint filter and in the duct, to increase the drying efficiency.

Turning on power

Before turning on the power of the dryer, check:

- Whether the supply voltage is in accordance with the value indicated on the nameplate;
- The dryer must be securely grounded.

Preparation of the laundry load

- The dryer can only dry laundries which have been spun dry. Do not put in laundry which is still dripping wet or still have excess water.
- Make sure all pockets are empty before placing them in the dryer
- Pull up zippers, sew and mend up loosened fasteners and tie up dispersed ribbons to prevent the laundry from being entangled. If necessary, put small items in a laundry bag.
- To achieve a better drying result, loosen up heavy loads before loading it into the dryer.

Load to dry

Laundry type	Cotton fabric	Synthetic fabric
Maximum load	6kg	3kg

Warning:

1. Avoid drying wool, silk and other delicate fabrics, as it may damage it.
2. Do not exceed the laundry load as suggested. This could damage the dryer as well as the laundry load.

Reference weight of fabrics for drying

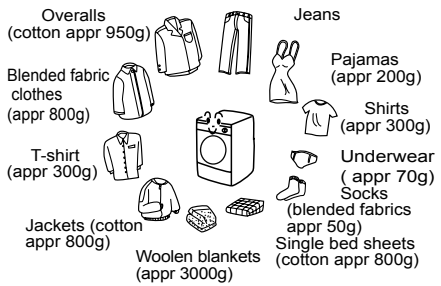

OPERATING INSTRUCTIONS

1. **Power up**
   Insert the power plug into an appropriate power outlet that is properly installed and grounded. Operating power supply: 220-240V~/50Hz
2. **Laundry loading**
   Open the door and load the laundry into the drum of the dryer. For a more energy efficient and better drying result, make sure the load has been spun dry. Try to loosen the load when placing in the dryer.
   Note: Check labels on clothing before placing them in the dryer. Some articles are not suitable for machine dry. High temperature may damage the fabric.
3. **Setting drying time**
   Turn the timer knob to set an optimal drying time according to the laundry.You can choose cool wind cycle or warm cycle according to your needs.
   Note:Before you set the drying time,ensure your hands are dry.
4. **Program completion**
   Warm wind cycle:
   Before the drying time comes to end, the dryer will interject cold air to cool off the clothes.
   After the timer stops,the arrowhead of the timer knob will point to OFF.
   Open the door to remove the laundry
   Cool wind cycle:
   Throughout the cycle,the heater does not activate.The laundary is dried by cool wind.
   Note:1.To avoid timer interruption,please do not turn the timer knob to the gray area of the program cycle.
   2.Clothes should go through a cooling down/airing phase of the cycle.
   If for any reason the dryer is stopped before the cycle has finished,dry clothes should be removed immediately and not left in the dryer.Clothes should be spread out to cool and not left bunched eg.in a clothes basket.
   Before you open the door, please switch off the power supply.
5. **Cleaning the dryer**
   Please clean the filter after use every time.

appliancesonline.com.au
Australia's largest online appliance retailer

CONTROL PANEL

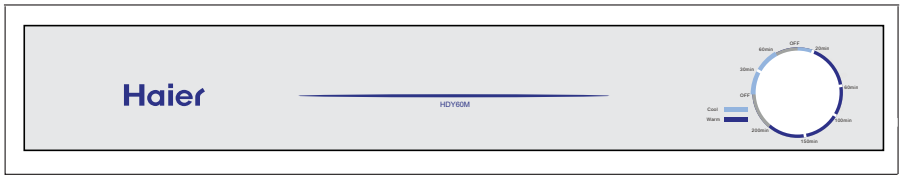

Please do not turn the timer knob to this two gray area of the program cycle

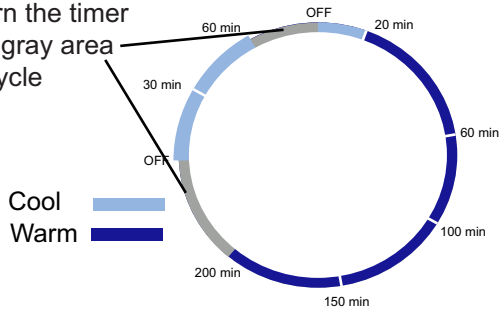

Dryer timer:the timer will let you set the time for up to 200 minutes to dry your clothes depending on the load of the clothes.

This dryer has two program types.The light Blue colour area is cool wind program and the dark Blue colour area is warm wind program. In cool wind program ,the heater does not work and the clothes are dried by cool wind. In warm wind program ,the heater works and the clothes are dried by warm wind. At the last 20 minutes of the warm program, the heater stops work and the clothes cool down.

There is an arrow on the timer knob.Turning the timer knob,the arrowhead points to the time you choose and the dryer begins to work.Then the timer will count down and the program knob will counter-clockwise until the arrowhead points to OFF.

CLEANING AND MAINTAINANCE

WARNING! Unplug the power cord prior to any cleaning

Cleaning the surface
Wipe off any dust or dirt on the body of the dryer and surface off the main control panel.
Note: Do not use excessive water. Just a damp cloth is fine.
Do not use solvent.
Do not use spray cleaners when cleaning the interior.
Do not use harsh or abrasive cleaners.

Cleaning the filter screen
To ensure a good ventilation effect during drying, the filter screen must be cleaned before or after each use.

1. Removing the filter.
Gently push together the clip on the filter screen and then pull out towards yourself.

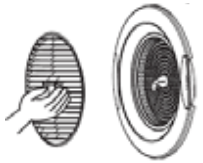

2. Cleaning the filter
Remove the lint with a soft brush or vacuum cleaner. Pay attention and do not damage the filters.
At the same time, remove any remaining lint from the perforated metal lint screen on the door.

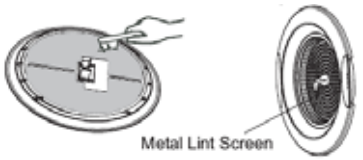

3. Re-installing the filter
After cleaning filters, put the screen back in place.
Note:Never operate your dryer without the lint filter.

appliancesonline.com.au
Australia's largest online appliance retailer

UNPACKING YOUR DRYER

- Dimensions
  a = 825 mm
  b = 560 mm
  c = 595 mm
  Weight = 30 kg

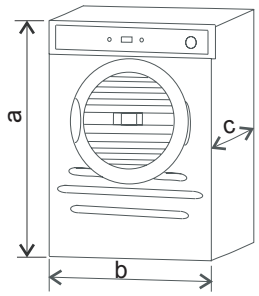

- Remove the transport packaging and the tape before starting dryer.

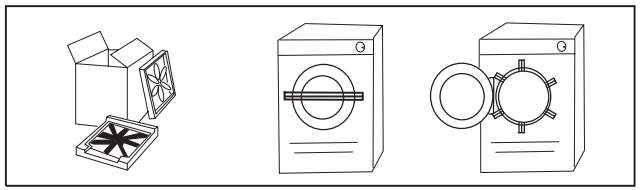

- Packing accessories

Check list of the accessories and materials provided with the machine:

Name	Owner's manual	Wall mounting kit	Panel film	Screw
Quantity	1	1	1	6

- To ensure the dryer operating normally, attention must be paid to the following in placement:

The rear of the dryer must not have any restriction to the intake of fresh air;

Check whether there is any damage to the dryer during transportation. Any damaged dryer must not be electrified. In case of any damage, contact your dryer supplier;

The dryer must be kept away from flammable substances;

The surrounding environment must be dry and ventilated;

To allow the dryer to perform better, the ambient temperature shall neither be lower than 10 nor higher than 35

WALL MOUNTING INSTRUCTIONS

1.Determine the location of the dryer on the wall and mark the bracket position.

- A minimum 50mm is needed between the top of the dryer and the ceiling for ease of installation;
- If mounting above a washing machine,allow sufficient room to open the lid of the washer.

Tools required		
For plaster/ Wooden wall	Drill&3mm Bit	1
	Philips head screw driver	1

Wall mounting kit includes		
Description	Plastic Spacers	2
	Wall hanging brackets	2
	Hanging hook	2
	Wood screws,12g 50mm imber screws	4

2.Fix the wall hanging brackets to the wall securely (eg. into the stud). If the studs are too far apart, fit a timber slat to the studs then mount the brackets onto the slat. The distance between each bracket is 553mm as per diagram.

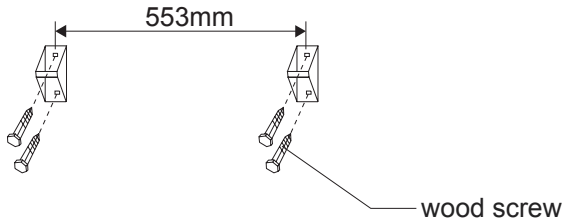

appliancesonline.com.au
Australia's largest online appliance retailer

3. To install the hook to the dryer, remove the 2 screws and 2 corks as indicated in Fig. 1.

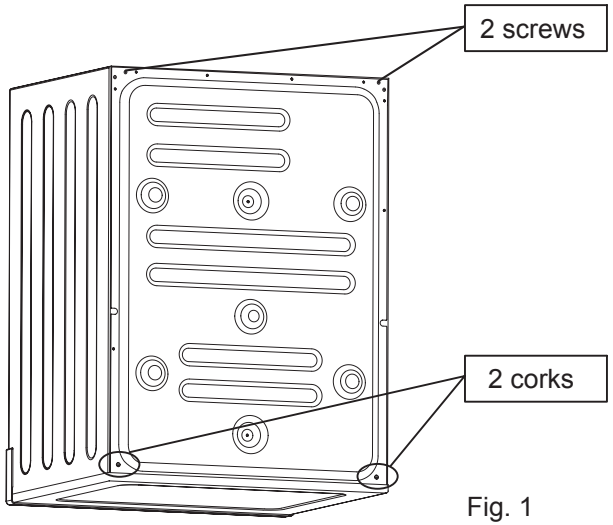

Fig. 1

4. Align hooks as shown in Fig. 2 and each hook should be fixed up well with three screws. Install the spacers provided as Fig. 2

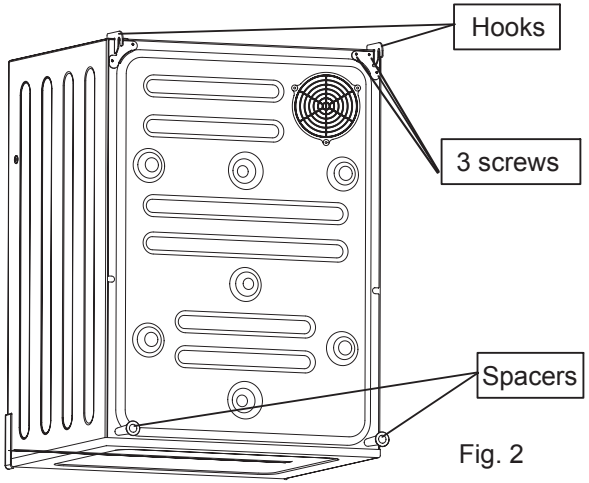

Fig. 2

5. With assistance, mount dryer on wall brackets. See Fig. 3

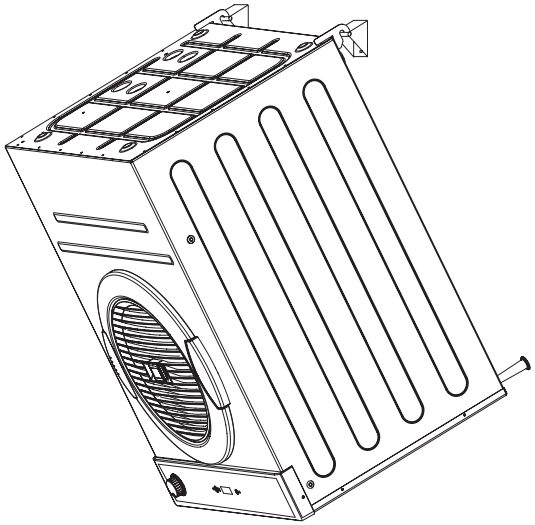

Fig. 3

6. A new control panel film with inverted symbols supplied. Peel the release paper from the back of inverted film then place the film on the surface so that writing is the correct way up.

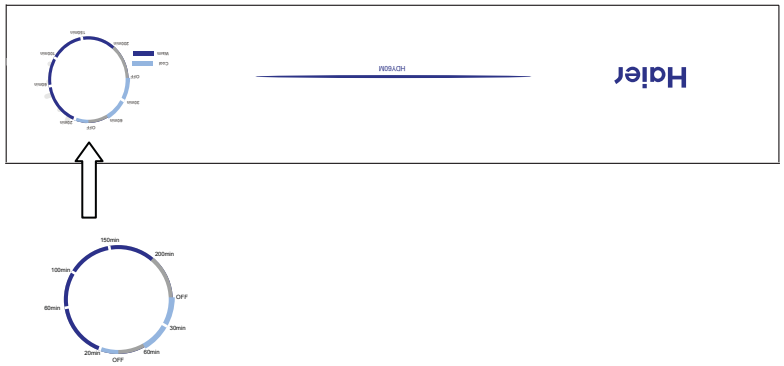

appliancesonline.com.au
Australia's largest online appliance retailer

TROUBLE SHOOTING

Those listed below are not failures. The following must be confirmed before calling for service:	
Problem	Possible Cause
The dryer does not start	●Is the dryer plugged in ? ●Is the local circuit out of power ? ●Is the door closed properly ? ●Has a drying program been set ?
The drying result is not good	●Was the correct drying program set ? ●Is the filter screen clean? ●Did the amount of the loaded laundry exceed the rated load ? ●Was the loaded laundry spun dry ? ●Did the laundry become twisted whilst drying?

WIRING CIRCUIT

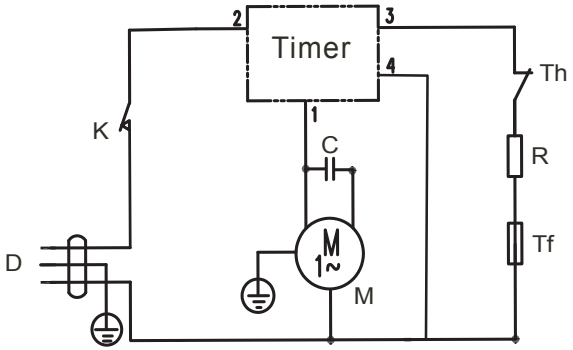

D-POWER K-Door Lock C-Capacitance M-Motor
Th-Thermostat Tf-Fuse R-Heater

appliancesonline.com.au
Australia's largest online appliance retailer

SPECIFICATIONS

Item \ Type	HDY60M
Power supply	(220-240)~/50Hz
Maximum operating current(A)	10
Rated load (kg)	6
Maximum power(W)	2000
Dimensions(H×D×W)mm	825×560×595
Weight (kg)	30
Waterproof level	IPX4